
GRANDSTREAM GRP2616

KEYBOARD & BUTTONS

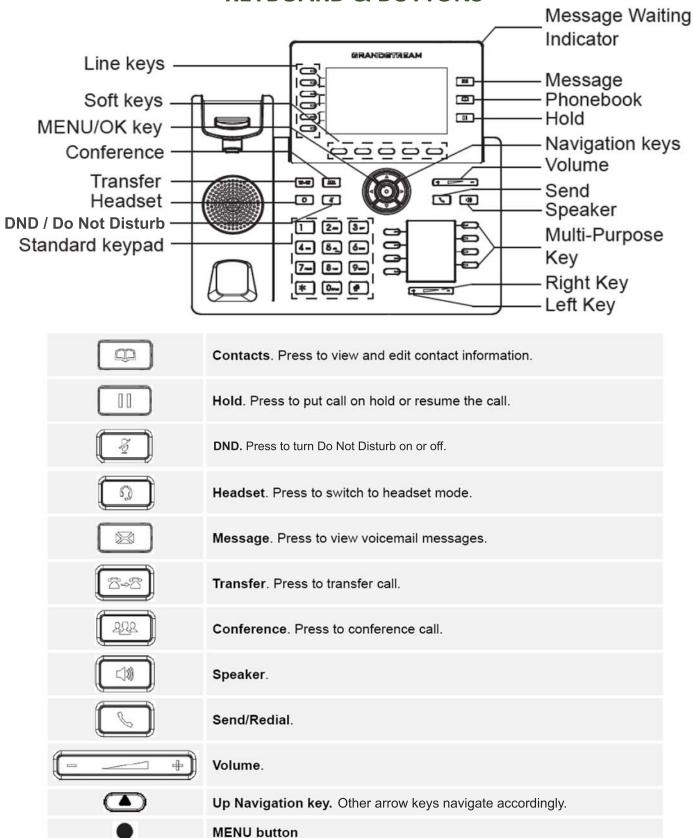

NOTE: The Line Keys along the Left of Top Display and Soft Keys along the Bottom of Top Display will show different options to select depending on what page and/or phone feature is being utilized.



GRANDSTREAM GRP2616

PHONE DISPLAY ICON INFORMATION

	Network Status. OFF - Network connection is up ON - Network connection is down
•	DND Status. OFF - Do Not Disturb disabled ON - Do Not Disturb enabled
(+	Call Forward All Status. OFF - Call Forward All feature disabled ON - Call Forward All feature enabled
(÷	Call Forward Busy Status. OFF - Call Forward Busy feature disabled ON - Call Forward Busy feature enabled
(¢	Call Forward No Answer Status. OFF - Call Forward No Answer feature disabled ON - Call Forward No Answer feature enabled
(¢	Call Forward Busy and Call Forward No Answer Status. OFF - Call Forward All and Call Forward No Answer feature disabled ON - Call Forward All and Call Forward No Answer feature enabled
Ç×	Missed Call Status. OFF - No missed call ON - New missed call
C	Handset Status. OFF - Handset is not in use ON - Handset is in use
Ω	Headset Status. OFF - Headset is not in use ON - Headset is in use
\$	Microphone MUTE Status. OFF - No muted ON - Muted
*	Bluetooth Status. (GRP2614/GRP2615/GRP2616 only) OFF - Bluetooth icon disappears ON - Bluetooth icon appears Paired – Bluetooth icon turns bright
٣	Incoming Call. The current call is an incoming call
٧	Outgoing Call. The current call is an outgoing call
©	Call On Hold. OFF - No call on hold ON - Call on hold
Ç	Call Connect. OFF - No call ON - Call connected
<u>"</u>	IP Call Status The current call is an IP call.
	SIP Call Enter number for initiate call. The current call is a SIP call.
	Ringtone Volume Call screen icon.
#	Ringtone Volume mute Call screen icon. The volume of ringtone is mute